




OpenVox Communication Co Ltd

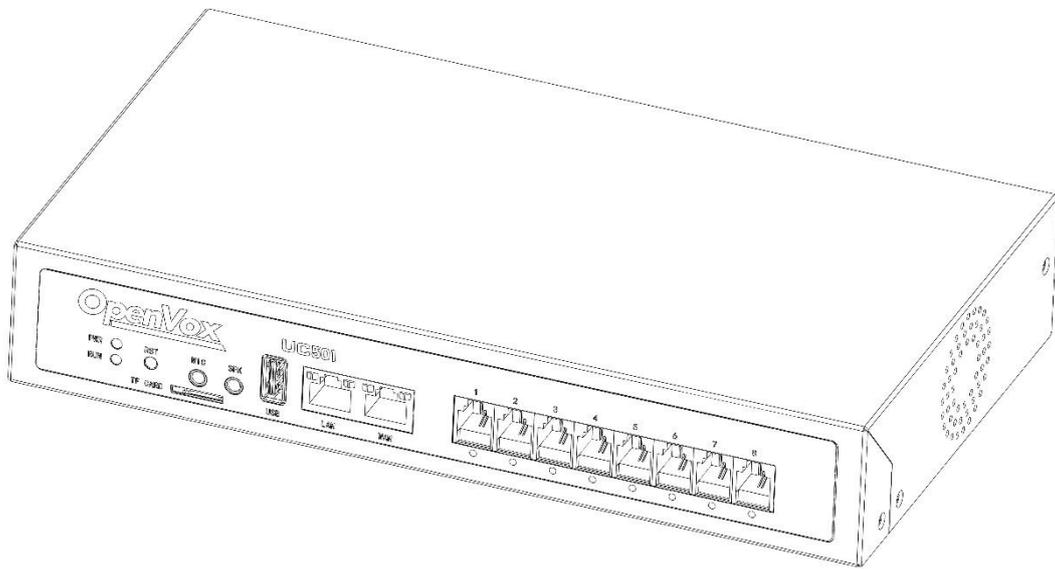

UC501 IPPBX Quick Start

Information

Access to data

Please visit www.openvox.cn, and select the product model, get the latest support information, including datasheet and user manual.

Technical Support

For help, contact OpenVox Communication Co., Ltd. Technical Support:

Email: support@openvox.cn

Tel: +86-755-66630978 , +86-755-82535461

Fax: +86-755-83823074

UC501 Quick Start


Packing Details

After unpacking, check if the contents are complete. If there are any omissions, please contact your dealer.

- UC501 x 1
- Network Connection x 1
- Power Adapter x 1
- Rubber Mat x 1
- Certification x 1
- Quick Start x 1

Hardware Specification


A. Front

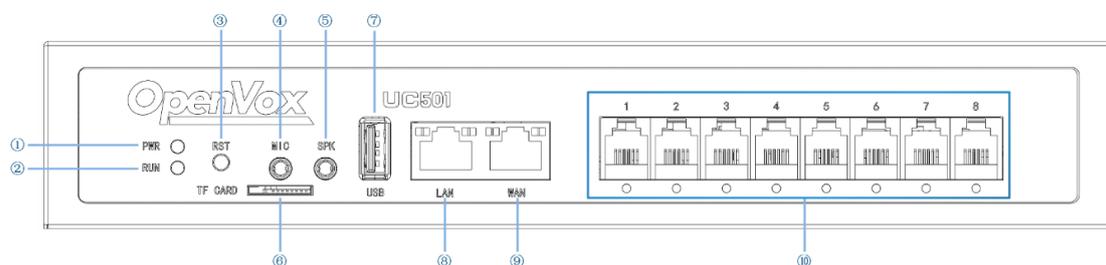

- ① Power Indicator ② System Indicator ③ Reset Button ④
Microphone ⑤ Speaker ⑥ TF Card Slot ⑦ USB Interface ⑧ WAN
Port ⑨ LAN Port ⑩ FXO/FXS Interface

LED Indicator	Color	Status
① Power Indicator	Always Green	Supply Power
② System Indicator	Green and Flash(1s)	Work Normally
⑩ Module Indicators (FXO)	Red and Flash(1s)	Normal
	Always Red	Connected
	Red and Flash(0.1s)	Communicating
⑩ Module Indicators (FXS)	Always Green	Normal
	Green and Flash(0.1s)	Communicating
During initialization, all LED indicators will flash successively		

B. Back

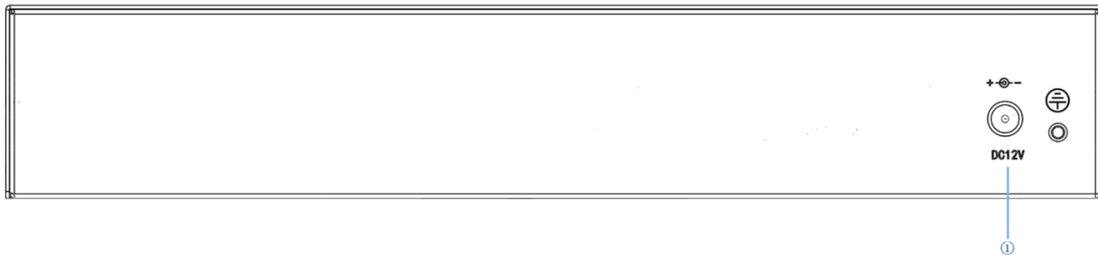

① Power Input: DC 12V

3. The UC501 series of products adopt modular design and are divided into new and old modules.


Below is the top view of the inside of the chassis, and the right side is the module installation area. There are four areas where you can install modules.

(1) **For new module** : users can choose any combination of the following three modules.


① FXS-200

② FXO-200

③ FXOS-200

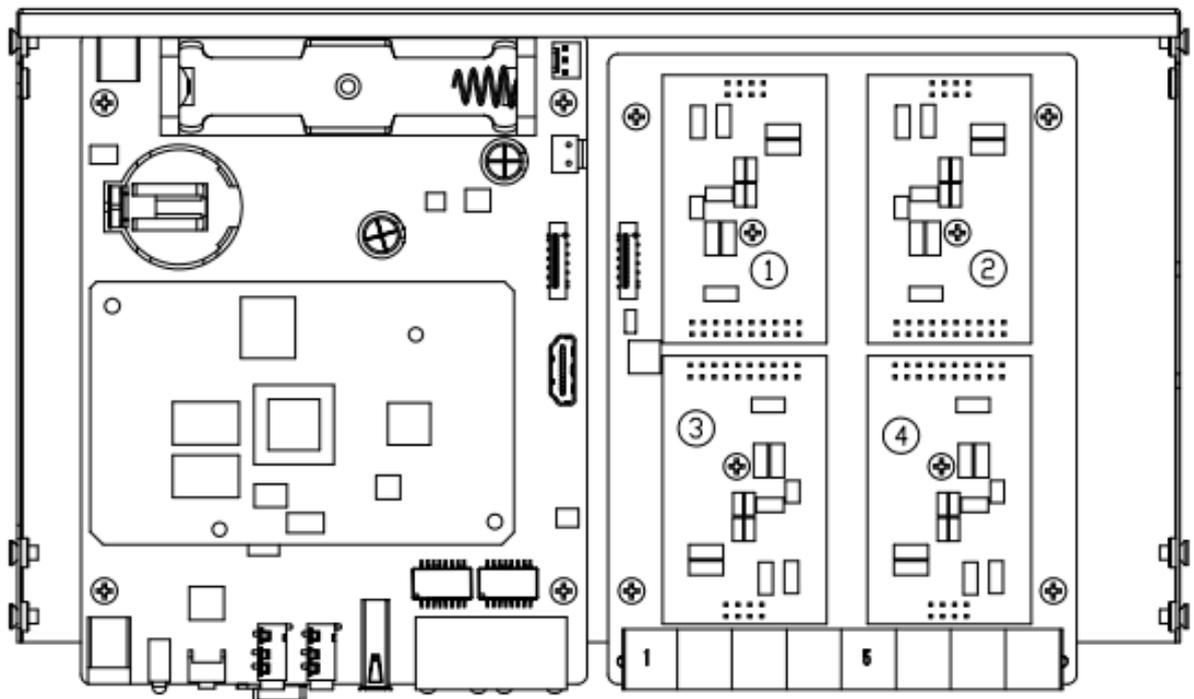


Remove the screw and install the module.

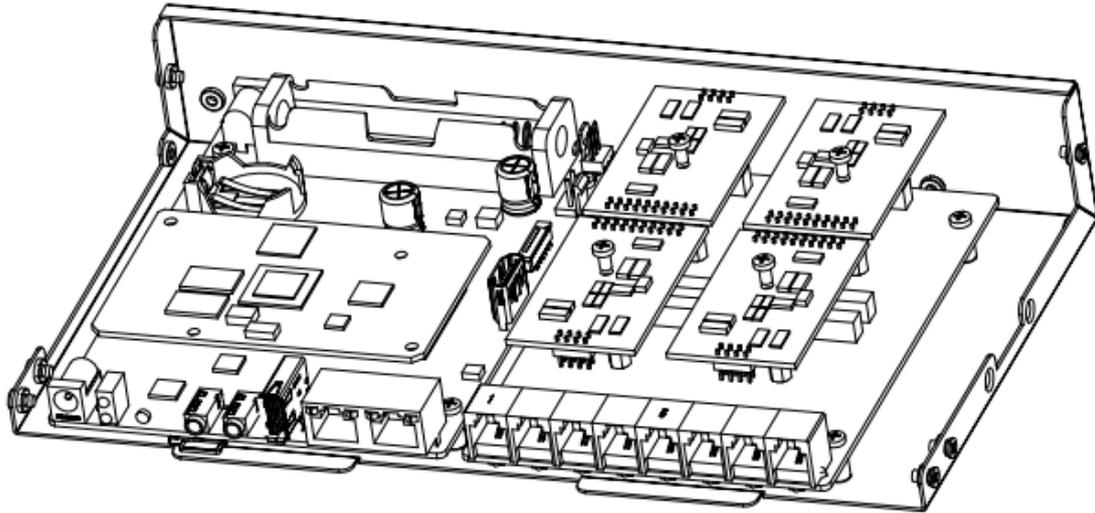


(2) **For old module** : The upper area is for the FXO-100/FXS-100 module and the lower area is for the FXO-400/FXS-400 module. It should be noted that the module cannot be installed on the left or right side at the same time, only supports ①+②, ③+④, ①+④, ②+③. Users can choose two module accessories to customize.

- FXO-100+FXO-100
- FXO-100+FXS-100
- FXO-100+FXO-400
- FXO-100+FXS-400
- FXS-100+FXS-100
- FXS-100+FXO-400
- FXS-100+FXS-400


- FXO-400+FXO-400
- FXO-400+FXS-400

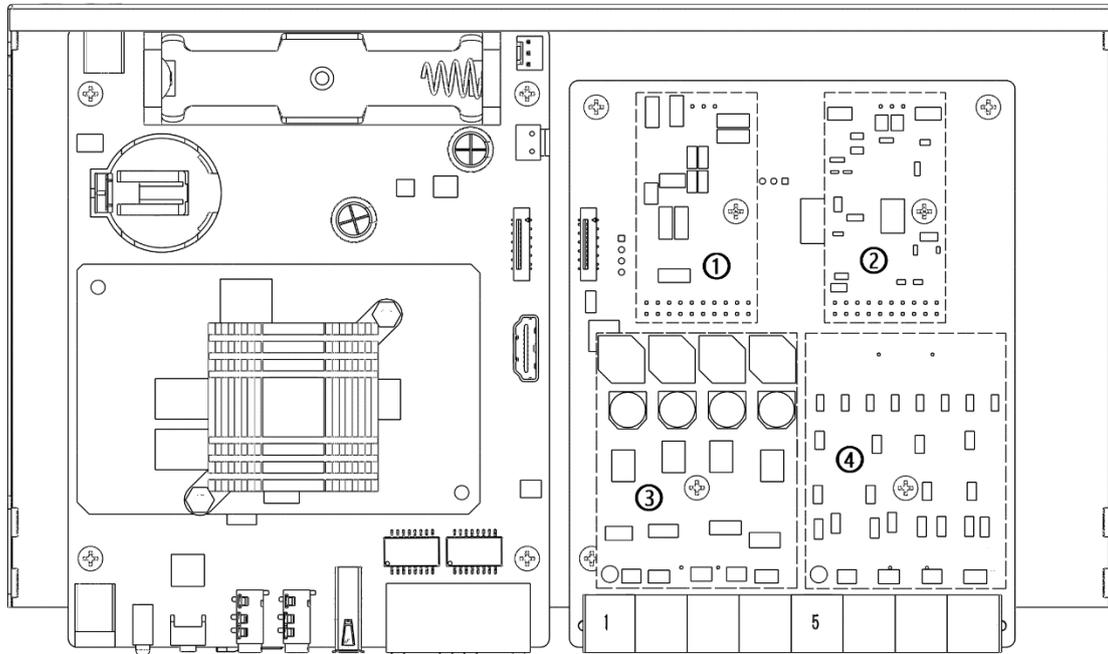


Remove the screw and install the module (②+③) .

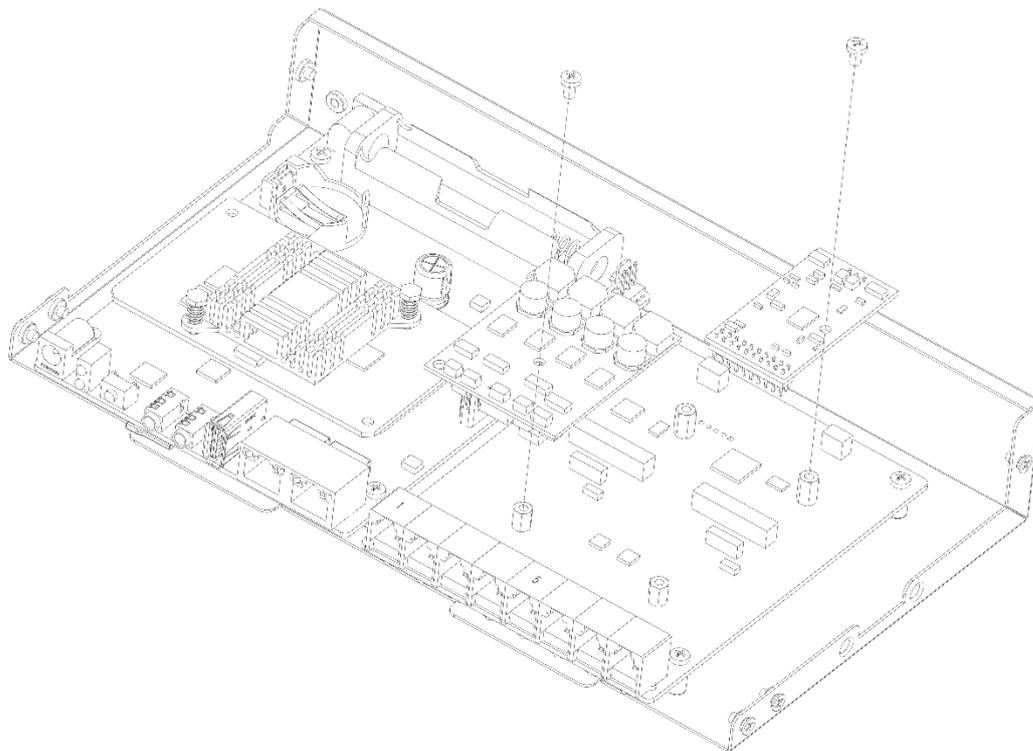


4. After installing the module, insert the chassis vertically as the picture shows, fasten it to the upper case, and then tighten the screws.

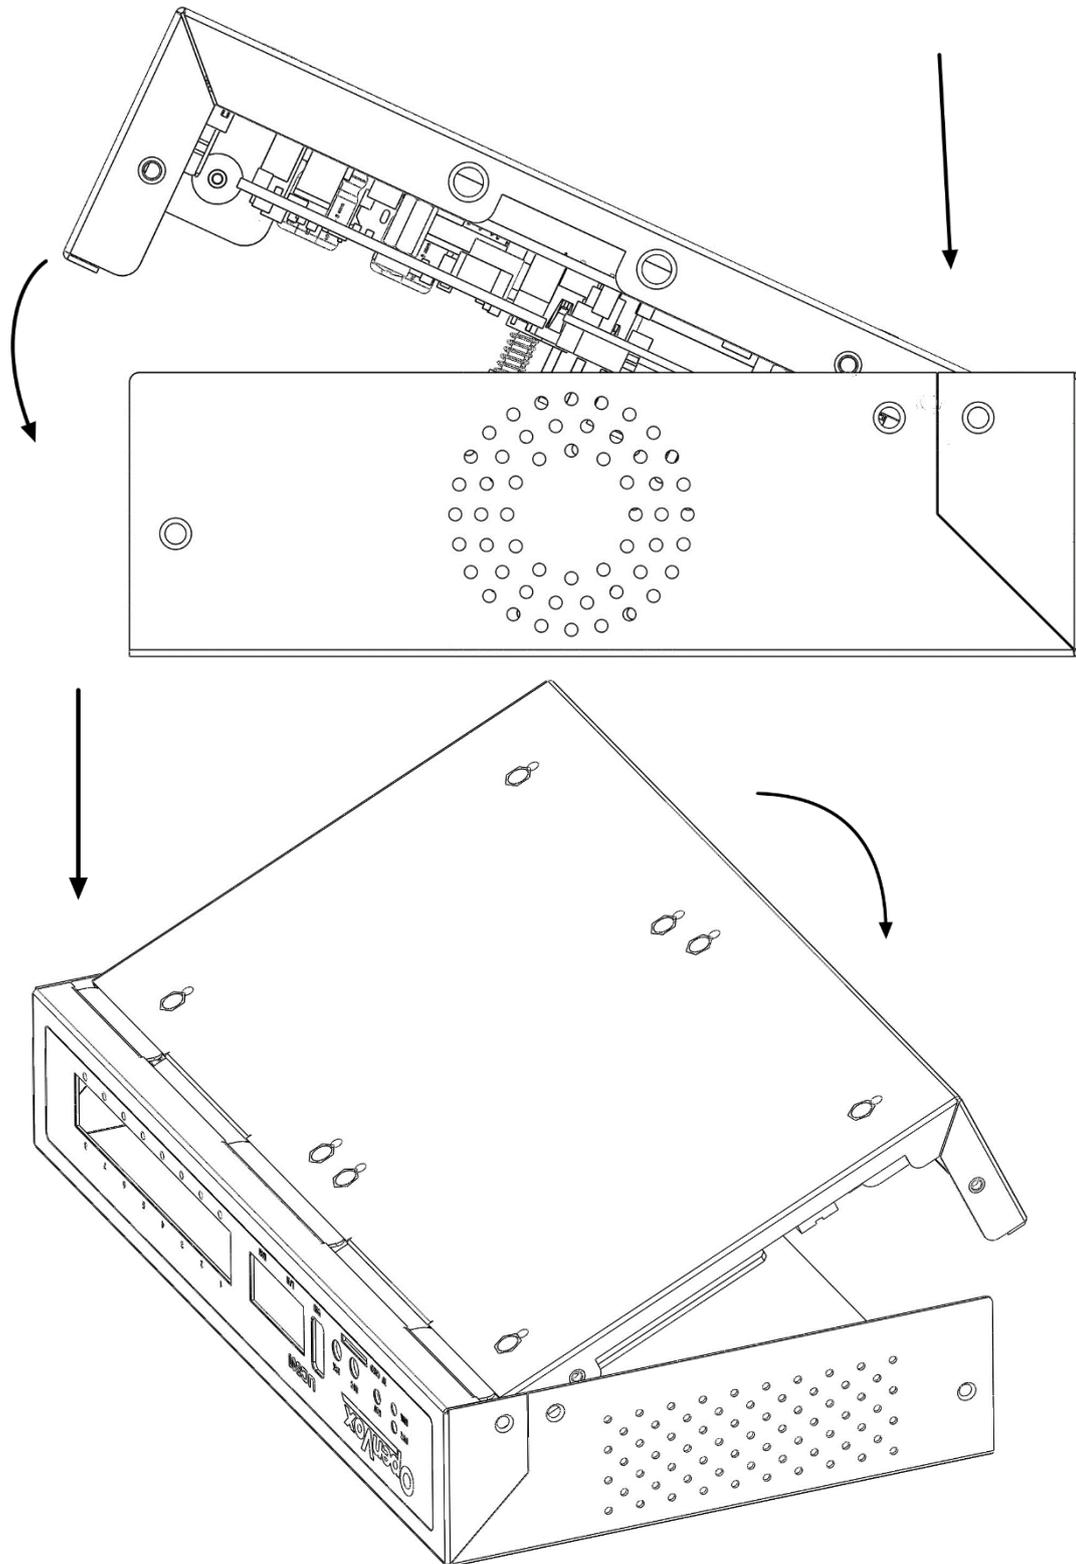

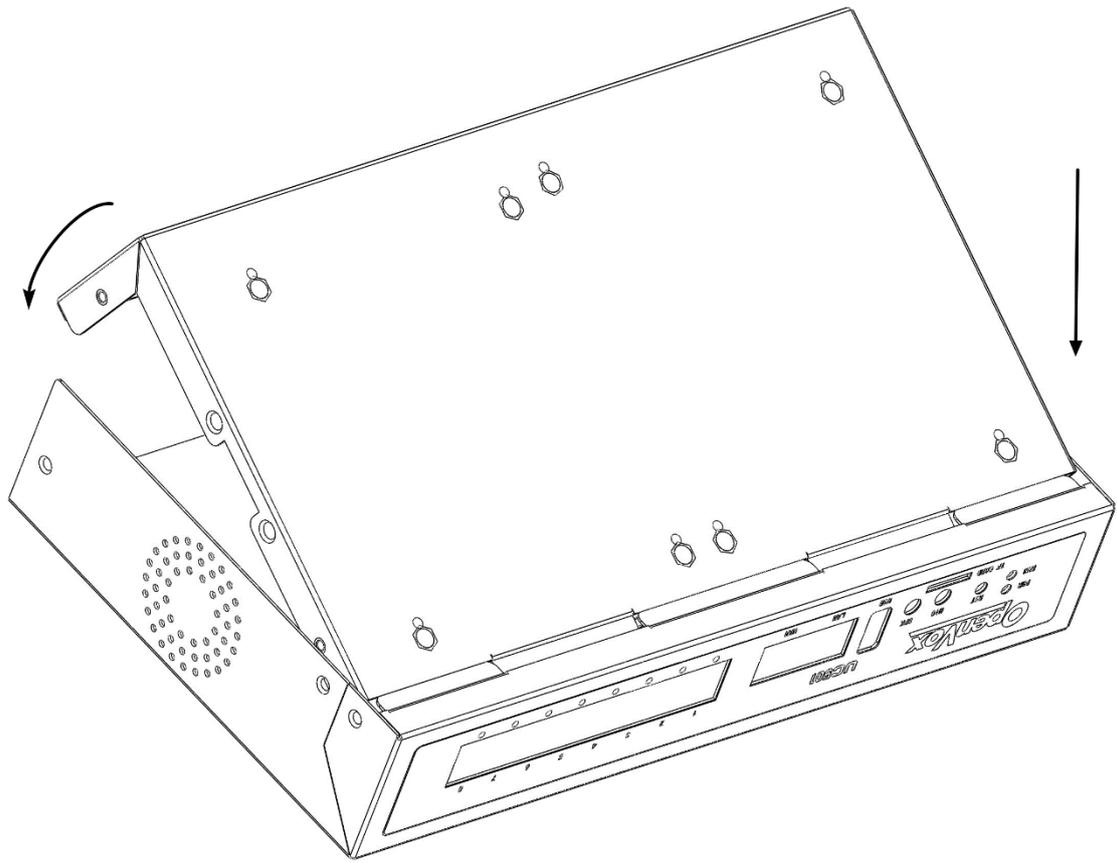

Cable Connection

Please use the dedicated power adapter. Otherwise, the failure or damage caused by other power adapters is not covered by the warranty.

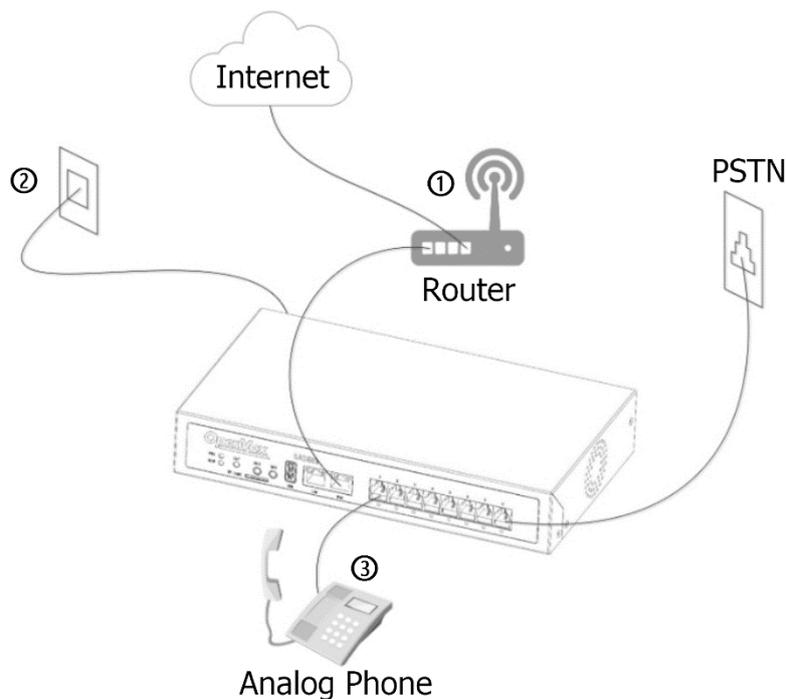

- ① Connect the LAN port to the LAN switch using a network cable.
- ② Use the dedicated power cable and turn on the power, the UC501 system starts, and the power indicator is green.
- ③ Connect the FXS connector to the analog phone using a telephone line.
- ④ Use a telephone line to connect the FXO interface to the PSTN line or the internal line of legacy PBX.

Note: Please connect the PSTN line or analog phone to the corresponding interface according to the color of the interface indicator.

Login administrator interface

1. Connect the computer to the same network with the UC501 device;
2. Open a web browser and enter the default IP address of UC501:
172.16.101.1;
3. Use the default username(admin) and password(admin) to log in to the administrator interface.