



# VS-GW1202-8S User Manual



**Address:** 10/F, Building 6-A, Baoneng Science and Technology Industrial Park, Longhua New District,  
Shenzhen, Guangdong, China 518109

**Tel:** +86-755-66630978, 82535461, 82535362

**Business Contact:** [sales@openvox.cn](mailto:sales@openvox.cn)

**Technical Support:** [support@openvox.cn](mailto:support@openvox.cn)

**Business Hours:** 09:00-18:00 (GMT+8) from Monday to Friday

**URL:** [www.openvox.cn](http://www.openvox.cn)

**Version1.0 (2014-01-22)**

**Full text**

The overall layout adjustment

**Version1.1(2014-04-15)**

**Full text**

**Version1.2(2016-08-4)**

**Full text**

## Copyright

Copyright© 2013 OpenVox Inc. All rights reserved. No part of this document may be reproduced without prior written permission.

## Confidentiality

Information contained herein is of a highly sensitive nature and is confidential and proprietary to OpenVox Inc. No part may be distributed, reproduced or disclosed orally or in written form to any party other than the direct recipients without the express written consent of OpenVox Inc.

## Disclaimer

OpenVox Inc. reserves the right to modify the design, characteristics, and products at any time without notification or obligation and shall not be held liable for any error or damage of any kind resulting from the use of this document.

OpenVox has made every effort to ensure that the information contained in this document is accurate and complete; however, the contents of this document are subject to revision without notice. Please contact OpenVox to ensure you have the latest version of this document.

## Trademarks

All other trademarks mentioned in this document are the property of their respective owners.

---

# Table of Contents

<b>1. Overview.....</b>	<b>1</b>
What is VS-GW1202-8S?	1
Sample Application	2
Product Appearance	2
Main Features	3
Physical Information	3
Software	4
<b>2. System .....</b>	<b>5</b>
Status	5
Time	5
Login Settings	6
General, Cluster, Tools and Information	7
Language Settings	7
Scheduled Reboot	8
Working Mode	8
Reboot Tools	10
Information	11
<b>3. Analog.....</b>	<b>12</b>
Channel Settings	12
Dial Matching Table	13
Advanced Settings	14
<b>4. SIP.....</b>	<b>18</b>
SIP Endpoints	18
Main Endpoint Settings	18
Advanced: Registration Options	21
Call Settings	22
Advanced: Signaling Settings	22
Advanced: Timer Settings	23
Media Settings	24
Batch SIP Endpoint	24
Advanced SIP Settings	25

---

Networking	25
NAT Settings	26
Advanced: NAT Settings	26
Parsing and Compatibility	27
Security	28
Media	29
<b>5. Network, Advanced and Logs.....</b>	<b>30</b>
Network	30
Network Settings	30
VPN Settings	32
DDNS Settings	33
Toolkit	33
Advanced	34
Asterisk API	34
Asterisk CLI	36
Asterisk File Editor	37
Logs	37

# 1. Overview

## What is VS-GW1202-8S?

OpenVox VoxStack Series Analog Gateway is an open source asterisk-based Analog VoIP Gateway solution for SMBs and SOHOs. With friendly GUI and unique modular design, users may easily setup their customized Gateway. Also secondary development can be completed through AMI (Asterisk Management Interface).

There are three models with VoxStack series Analog Gateway, the VS-GW1202-8S, VS-GW1202-16S and VS-GW1600-40S. There are 8 ports in VS-GW1202-8S. The Modular Design Analog Gateways are ranging from 8 up to 40 ports, developed for interconnecting the PSTN networks with a wide selection of codecs and signaling protocol, including G.711A, G.711U, G.729, G.722, G.723 and iLBC to quickly reduce communication expenses and maximize cost-savings. With the unique design of the VoxStack gateway, it can support hot-swap. Users can simply add or remove the modules for hardware expansion or exchange.

The VoxStack gateway designs with 2 LAN switch boards to provide stack ability on the hardware upgrade. You can choose either of them.

The Analog gateway use standard SIP protocol and compatible with Leading IMS/NGN platform, IPPBX and SIP servers, support most of the VoIP operating platforms such as Asterisk, Elastix, 3CX, FreeSWITCH ,Broadsoft etc.

## Sample Application

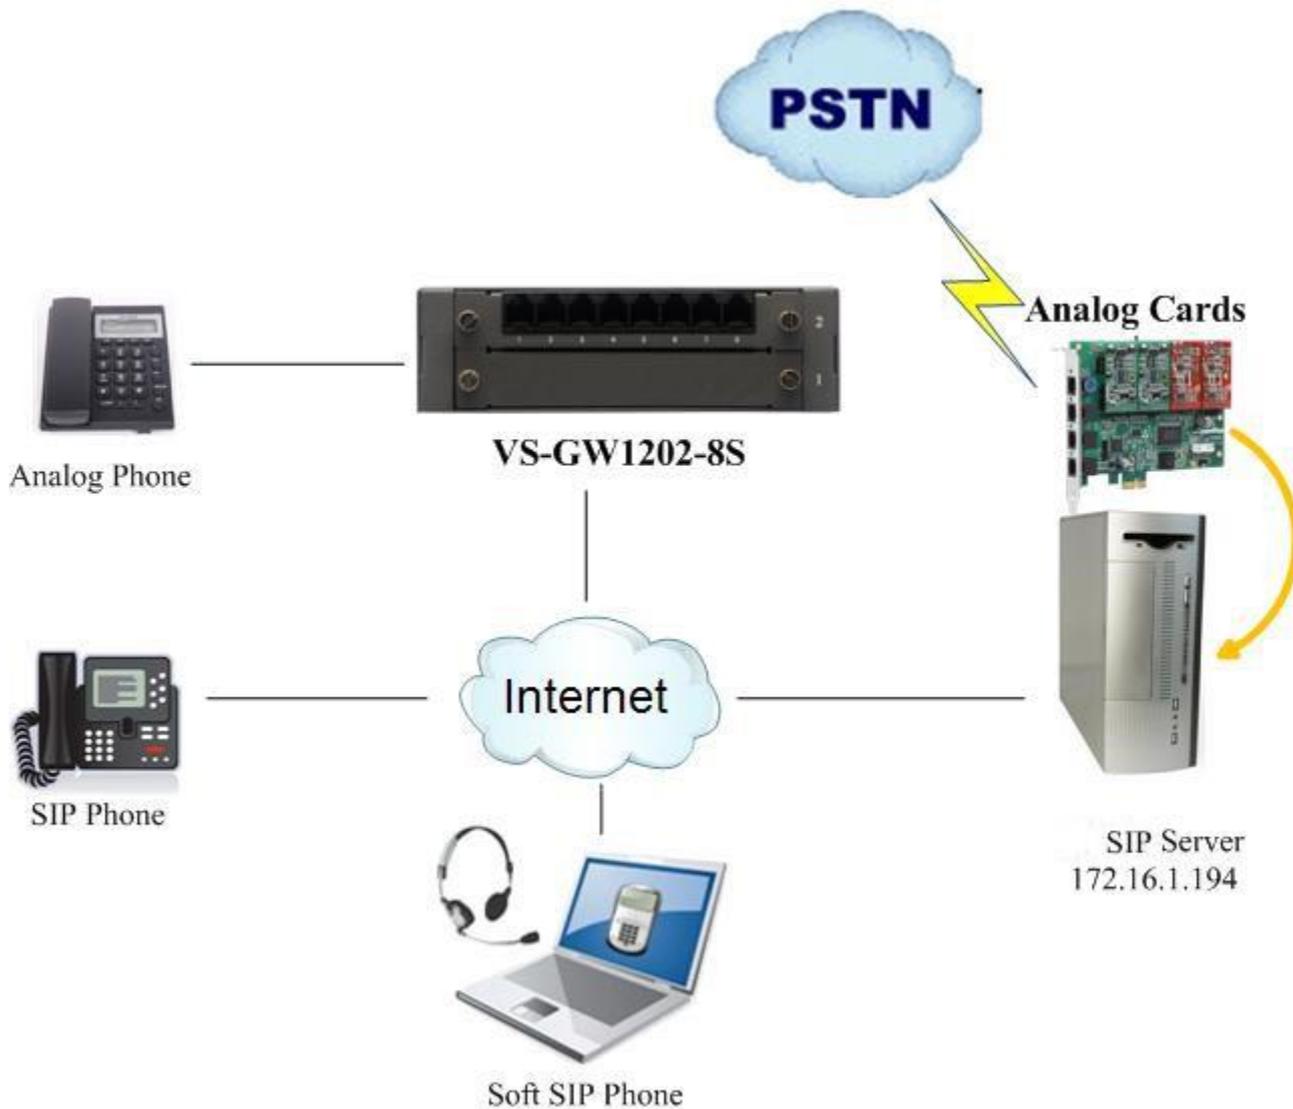


Figure 1-2-1 Topological Graph

## Product Appearance

The picture below is appearance of Analog Series Gateway.



VS-GW1202-8S



VS-GW1600-40S

Figure 1-3-1 Product Appearance

## Main Features

- Modular and VoxStack design
- Based on Asterisk®
- Editable Asterisk® configuration file
- Support T.38 fax relay and T.30 fax transparent, can continually fax multiple page
- Echo cancellation and Static jitter buffer
- Wide selection of codecs and signaling protocol
- DTMF relay
- Ring cadence and frequency setting
- MWI(Message waiting indicator)
- DHCP , DNS/DDNS, NAT Network
- VAG and CNG
- All hot-swap
- Stable performance, flexible dialing, friendly GUI
- Two-year time warranty

## Physical Information

Table 1-5-1 Description of Physical Information

Weight	732g
Size	15cm*19cm*4.5cm
Temperature	-20~70°C (Storage)
	0~40°C (Operation)

Operation humidity	10%~90% non-condensing
Power source	12V DC/4A
Max power	16W
LAN port	2


## Software

**Default IP:** 172.16.99.1

**Username:** admin

**Password:** admin

Please enter the default IP in your browser to scan and configure the module you want. Now we offer you two RJ45 Network ports to access to your gateway on the board, ETH1 and ETH2. You can choose either of them and they are the same.

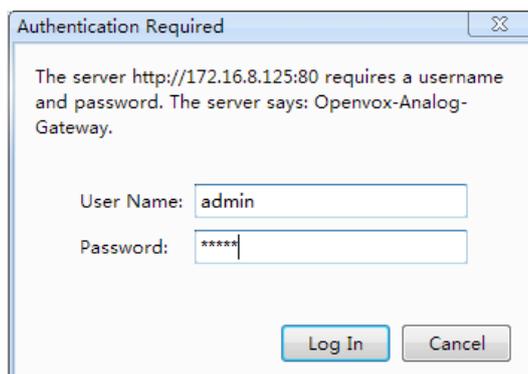

**Figure 1-6-1 LOGIN Interface**

## 2. System

### Status

On the “Status” page, you will see Port/SIP/Network information and status.

Port Information				
Port	Type	Caller ID	Sip Account	Port Status
1	FXS	305	305	OnHook
2	FXS	306	306	OnHook
3	FXS	8003		OnHook
4	FXS	8004		OnHook
5	FXS	8005		OnHook
6	FXS	8006		OnHook
7	FXS	8007		OnHook
8	FXS	8008		OnHook

SIP Information				
Endpoint Name	User Name	Host	Registration	SIP Status
305	305	172.16.99.97	client	Registered
306	306	172.16.99.97	client	Registered

Network Information						
Name	MAC Address	IP Address	Mask	Gateway	RX Packets	TX Packets
LAN	A0:98:05:01:15:67	172.16.8.125	255.255.0.0	172.16.0.1	15175	1019

**Figure 2-1-1 System Status**

### Time

**Table 2-2-1 Description of Time Settings**

Options	Definition
System Time	Your gateway system time.
Time Zone	The world time zone. Please select the one which is the same or the closest as your city.
POSIX TZ String	Posix time zone strings.
NTP Server 1	Time server domain or hostname. For example, [time.asia.apple.com].

NTP Server 2	The first reserved NTP server. For example, [time.windows.com].
NTP Server 3	The second reserved NTP server. For example, [time.nist.gov].
Auto-Sync from NTP	Whether enable automatically synchronize from NTP server or not. ON is enable, OFF is disable this function.
Sync from NTP	Sync time from NTP server.
Sync from Client	Sync time from local machine.

For example, you can configure like this:

Time Settings	
System Time:	2013-9-11 17:46:41
Time Zone:	Chongqing
POSIX TZ String:	CST-8
NTP Server 1:	us.pool.ntp.org
NTP Server 2:	64.236.96.53
NTP Server 3:	time.windows.com
Auto-Sync from NTP:	ON

Sync from NTP    Sync from Client

**Figure 2-2-1 Time Settings**

You can set your gateway time Sync from NTP or Sync from Client by pressing different buttons.

## Login Settings

Your gateway doesn't have administration role. All you can do here is to reset what new username and password to manage your gateway. And it has all privileges to operate your gateway. You can modify both your "Web Login Settings" and "SSH Login Settings". If you have changed these settings, you don't need to log out, just rewriting your new user name and password will be OK.

**Table 2-3-1 Description of Login Settings**

Options	Definition
---------	------------

User Name	Define your username and password to manage your gateway, without space here. Allowed characters "-_+. < >&0-9a-zA-Z". Length: 1-32 characters.
Password	Allowed characters "-_+. < >&0-9a-zA-Z". Length: 4-32 characters.
Confirm Password	Please input the same password as 'Password' above.

Web Login Settings

<b>User Name:</b>	<input type="text" value="admin"/>
<b>Password:</b>	<input type="password" value="....."/>
<b>Confirm Password:</b>	<input type="password" value="....."/>

SSH Login Settings

<b>Enable:</b>	<input checked="" type="checkbox"/> ON
<b>User Name:</b>	<input type="text" value="admin"/>
<b>Password:</b>	<input type="text" value="admin"/>
<b>Port:</b>	<input type="text" value="12345"/>

Figure 2-3-1 Login Settings

**Notice:** Whenever you do some changes, do not forget to save your configuration.

## General, Cluster, Tools and Information

### Language Settings

You can choose different languages for your system. If you want to change language, you can switch “Advanced” on, then “Download” your current language package. After that, you can modify the package with the language you need. Then upload your modified packages, “Choose File” and “Add”, those will be ok.

Language Settings	
Language:	English <input type="text"/>
Advanced:	<input checked="" type="checkbox"/> ON
Download:	Download selected language package. <input type="button" value="Download"/>
Delete:	Delete selected language. <input type="button" value="Delete"/>
Add New Language:	New language Package: <input type="text"/> <input type="button" value="浏览..."/> <input type="button" value="Add"/>

Figure 2-4-1 Language Settings

## Scheduled Reboot

If switch it on, you can manage your gateway to reboot automatically as you like. There are four reboot types for you to choose, “By Day, By Week, By Month and By Running Time”.

Scheduled Reboot	
Enabled:	<input checked="" type="checkbox"/> ON
Reboot Type:	By Day <input type="text"/>
Running Time:	<div style="border: 1px solid black; padding: 2px;">                     By Day                      By Day                      By Week                      By Month                      By Running Time                 </div> : <input type="text" value="0"/> Minute: <input type="text" value="0"/>
<input type="button" value="Save"/>	

Figure 2-4-2 Reboot Types

If use your system frequently, you can set this enable, it can helps system work more efficient.

## Working Mode

OpenVox Analog Gateway offers you two ways to cluster your gateway: Automatic Cluster or Manual Cluster. When you first time log in your gateway, you will only see 4 ports of one module.

Then you can press  button, the system will search other modules in the LAN and communicate.

Working Mode	
Action:	<input type="button" value="Automatic Cluster"/>
Basis:	<input type="checkbox"/> Image build time <input type="checkbox"/> Image version
Detail:	<input type="checkbox"/> OFF

Figure 2-4-3 Automatic Cluster

If you want to choose **Manual Cluster**, you should switch **Detail** on first. so we offer 3 kinds of Working Modes.

Working Mode																					
Action:	Automatic Cluster																				
Basis:	<input type="checkbox"/> Image build time <input type="checkbox"/> Image version																				
Detail:	<input checked="" type="checkbox"/> ON																				
Mode:	Master <input type="button" value="Set Default"/>																				
Slave number:	4																				
Password:	783587																				
Master IP(Local IP):	192.168.130.110																				
Slaves IP List:	<table border="1"> <tbody> <tr> <td>Board-2</td> <td>Original IP:</td> <td>172.16.8.128</td> <td>Target IP:</td> <td>192.168.130.111</td> </tr> <tr> <td>Board-3</td> <td>Original IP:</td> <td>172.16.8.129</td> <td>Target IP:</td> <td>192.168.130.112</td> </tr> <tr> <td>Board-4</td> <td>Original IP:</td> <td>172.16.8.130</td> <td>Target IP:</td> <td>192.168.130.113</td> </tr> <tr> <td>Board-5</td> <td>Original IP:</td> <td>172.16.8.131</td> <td>Target IP:</td> <td>192.168.130.114</td> </tr> </tbody> </table>	Board-2	Original IP:	172.16.8.128	Target IP:	192.168.130.111	Board-3	Original IP:	172.16.8.129	Target IP:	192.168.130.112	Board-4	Original IP:	172.16.8.130	Target IP:	192.168.130.113	Board-5	Original IP:	172.16.8.131	Target IP:	192.168.130.114
Board-2	Original IP:	172.16.8.128	Target IP:	192.168.130.111																	
Board-3	Original IP:	172.16.8.129	Target IP:	192.168.130.112																	
Board-4	Original IP:	172.16.8.130	Target IP:	192.168.130.113																	
Board-5	Original IP:	172.16.8.131	Target IP:	192.168.130.114																	
Remain Original IP address:	<input checked="" type="checkbox"/> ON																				
Action:	Manual Cluster																				

**Figure 2-4-4 Working Modes**

- Stand-alone Mode: Run alone, total 4 ports.
- Master Mode: Run as master with two different IP, controlling up to 10 slaves. (The master can be accessed by the original IP. The target IP is used to communicate with the slaves.)
- Slave Mode: Run as slave with two different IP, controlled by the master. If the original IP is forbidden, the slave can be accessed by the master with inward IP only.

**Notice:** You can choose Remain Original IP address ON or OFF. If set it on, you can log in your getaway with Original IP and Target IP.

Table 2-4-1 Definition of Master Options

Options	Definition
Mode	Stand-alone Mode Master Mode Slave Mode
Slave number	The number of slave board.
Password (master mode)	Master Mode password. Must be 4~16 bits digital 0-9.
Master IP(Local IP) (master mode)	Master's target IP. Must be set in the subnet different from external subnet, so that the external subnet couldn't access internal subnet.
Slaves IP List	Set the slaves's original and target IP. The original IP is outward IP, and the target IP is inward IP. Up to four slaves.

## Reboot Tools

On the “Tools” pages, there are reboot, update, upload, backup and restore toolkits. You can choose system reboot and Asterisk reboot separately.




**Figure 2-4-5 Reboot Prompt**

If you press “Yes”, your system will reboot and all current calls will be dropped. Asterisk Reboot is the same.

**Table 2-4-1 Instruction of reboots**

Options	Definition
System Reboot	This will turn off your gateway and then turn it back on. This will drop all current calls.
Asterisk Reboot	This will restart Asterisk and drop all current calls.

We offer two kinds of update types for you, you can choose System Update or System Online Update. System Online Update is an easier way to update your system.

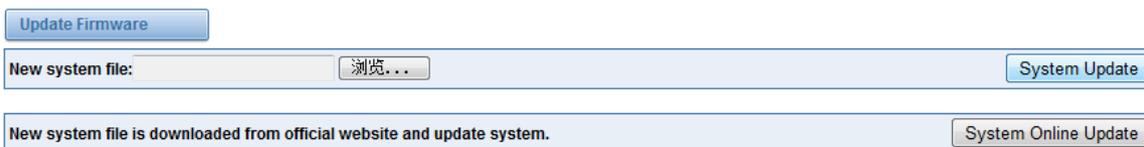

**Figure 2-4-6 Update Firmware**


If you want to store your previous configuration, you can first backup configuration, then you can upload configuration directly. That will be very convenient for you.



**Figure 2-4-7 Upload and Backup**

Sometimes there is something wrong with your gateway that you don’t know how to solve it, mostly you will select factory reset. Then you just need to press a button, your gateway will be

reset to the factory status.



**Figure 2-4-8 Factory Reset**

## Information

On the “Information” page, there shows some basic information about the analog gateway. You can see software and hardware version, storage usage, memory usage and some help information.

<b>Model Name:</b>	VS-AGU-E2M0800
<b>Software Version:</b>	1.0.3
<b>Hardware Version:</b>	1.0.0
<b>Slot Number:</b>	1
<b>Storage Usage:</b>	1.7M/63.5M (3%)
<b>Memory Usage:</b>	44.1395 % <a href="#">Memory Clean</a>
<b>Build Time:</b>	2013-11-18 14:49:17
<b>Contact Address:</b>	F/3, Building 127, Jindi industrial zone, Futian district, Shenzhen, Guangdong, China
<b>Tel:</b>	+86-755-82535461
<b>Fax:</b>	+86-755-83823074
<b>E-Mail:</b>	<a href="mailto:support@openvox.cn">support@openvox.cn</a>
<b>Web Site:</b>	<a href="http://www.openvox.cn">http://www.openvox.cn</a>
<b>Rebooting Counts:</b>	15
<b>System Time:</b>	2013-11-22 15:59:40
<b>System Uptime:</b>	0 days 05:03:43

**Figure 2-4-9 System Information**

### 3. Analog

You can see much information about your ports on this page.

#### Channel Settings

Port	Type	Name	Caller ID	Sip Account	CID signalling	Rx gain	Tx gain	Actions
1	FXS	<input type="text" value="board1-port1"/>	<input type="text" value="8001"/>	None ▾	bell ▾	<input type="text" value="3.0"/>	<input type="text" value="3.0"/>	
2	FXS	<input type="text" value="board1-port2"/>	<input type="text" value="8002"/>	None ▾	bell ▾	<input type="text" value="3.0"/>	<input type="text" value="3.0"/>	
3	FXS	<input type="text" value="board1-port3"/>	<input type="text" value="8003"/>	None ▾	bell ▾	<input type="text" value="3.0"/>	<input type="text" value="3.0"/>	
4	FXS	<input type="text" value="board1-port4"/>	<input type="text" value="8004"/>	None ▾	bell ▾	<input type="text" value="3.0"/>	<input type="text" value="3.0"/>	
5	FXS	<input type="text" value="board1-port5"/>	<input type="text" value="8005"/>	None ▾	bell ▾	<input type="text" value="3.0"/>	<input type="text" value="3.0"/>	
6	FXS	<input type="text" value="board1-port6"/>	<input type="text" value="8006"/>	None ▾	bell ▾	<input type="text" value="3.0"/>	<input type="text" value="3.0"/>	
7	FXS	<input type="text" value="board1-port7"/>	<input type="text" value="8007"/>	None ▾	bell ▾	<input type="text" value="3.0"/>	<input type="text" value="3.0"/>	
8	FXS	<input type="text" value="board1-port8"/>	<input type="text" value="8008"/>	None ▾	bell ▾	<input type="text" value="3.0"/>	<input type="text" value="3.0"/>	

Figure 3-1-1 Channel System

On this page, you can see every port status, and click action  button to configure the port.

Board-1-Port 1

▼ General

<u>Port type:</u>	FXS
<u>Name:</u>	<input type="text"/>
<u>Rx gain:</u>	<input type="text" value="3.0"/>
<u>Tx gain:</u>	<input type="text" value="3.0"/>
<u>Ring timeout:</u>	<input type="text" value="50"/>
<u>Sip Account:</u>	None ▼

▼ Caller ID

<u>Caller ID:</u>	<input type="text" value="8001"/>
<u>Full name:</u>	<input type="text" value="Channel 8001"/>
<u>CID signalling:</u>	bell ▼
<u>DND:</u>	<input type="checkbox"/>

▼ Call feature

<u>Call waiting:</u>	<input checked="" type="checkbox"/>
<u>Three way calling:</u>	<input checked="" type="checkbox"/>
<u>Call transfer:</u>	<input checked="" type="checkbox"/>
<u>Call forward:</u>	No ▼
<u>Call forward number:</u>	<input type="text"/>

Figure 3-1-2 Port Configure

## Dial Matching Table

Dialing rules is used to effectively judge whether the received number sequence is complete, in order to timely end receiving number and send out number

The correct use of dial-up rules, helps to shorten the turn-on time of phone call

<pre> _01[358]XXXXXXXXX _010XXXXXXXXX _02XXXXXXXXXX _0[3-9]XXXXXXXXXX _11[02-9] _111XX _9[56]XXX _100XX _10[1-9] _12[0-24-9] _1[358]XXXXXXXXX _[235-7]XXXXXX _[48][1-9]XXXXXX _[48]0[1-9]XXXXX _[48]00XXXXXXXX _#XX _*XX ## _X.</pre>	<p>Dial Matching rule may be numbers, letters, or combinations thereof. If an rule is prefixed by a '_' character, it is interpreted as a pattern rather than a literal. In patterns, some characters have special meanings:</p> <p>X - any digit from 0-9  Z - any digit from 1-9  N - any digit from 2-9  [1235-9] - any digit in the brackets (in this example, 1, 2, 3, 5, 6, 7, 8, 9)  ! - wildcard, causes the matching process to complete as soon as it can unambiguously determine that no other matches are possible</p> <p>For example, the rule _NXXXXXX would match normal 7 digit dialings, while _1NXXXXXXXX would represent an area code plus phone number preceded by a one.</p>
---	---

Figure 3-2-1 Port Configure

## Advanced Settings

Global settings


▼ General

<b>Tone duration:</b>	<input type="text" value="100"/>
<b>Dial timeout:</b>	<input type="text" value="180"/>
<b>Codec:</b>	<input type="text" value="Ulaw"/>
<b>Impedance:</b>	<input type="text" value="China"/>
<b>Echo cancel tap length:</b>	<input type="text" value="512"/>
<b>VAD/CNG:</b>	<input type="checkbox"/> OFF
<b>Flash/Wink:</b>	<input checked="" type="checkbox"/> ON
<b>Min flash time:</b>	<input type="text" value="40"/>
<b>Max flash time:</b>	<input type="text" value="400"/>
<b>"#" as Ending Dial Key:</b>	<input checked="" type="checkbox"/> ON
<b>Checking SIP Status:</b>	<input type="checkbox"/> OFF

Figure 3-3-1 General Configuration

Table 3-3-1 Instruction of General

Options	Definition
Tone duration	How long generated tones (DTMF and MF) will be played on the channel. (in milliseconds)
Dial timeout	Specifies the number of seconds we attempt to dial the specified devices.
Codec	Set the global encoding : mulaw, alaw.
Impedance	Configuration for impedance.
Echo cancel tap length	Hardware echo canceler tap length.
VAD/CNG	Turn on/off VAD/CNG.
Flash/Wink	Turn on/off Flash/wink.
Min flash time	Min flash time.(in milliseconds).
Max flash time	Max flash time.(in milliseconds).
"#"as Ending Dial Key	Turn on/off Ending Dial Key.

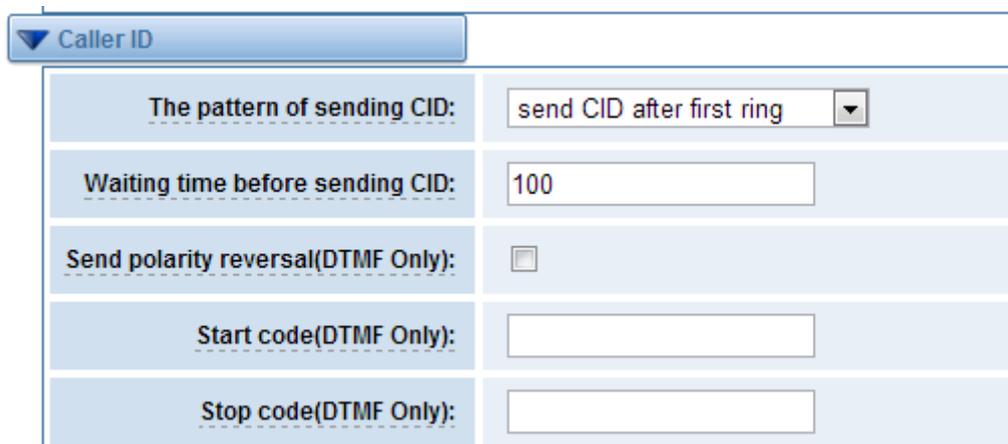

Caller ID

The pattern of sending CID: send CID after first ring

Waiting time before sending CID: 100

Send polarity reversal(DTMF Only):

Start code(DTMF Only):

Stop code(DTMF Only):

Figure 3-3-2 Caller ID

Table 3-3-2 Instruction of Caller ID

Options	Definition
The pattern of sending CID	Some countries(UK) have ring tones with different ring tones(ring-ring), which means the caller ID needs to be set later on, and not just after the first ring, as per the default(1).

Waiting time before sending CID	How long we will waiting before sending the CID on the channel.(in milliseconds).
Sending polarity reversal(DTMF Only)	Send polarity reversal before sending the CID on the channel.
Start code(DTMF Only)	Start code.
Stop code(DTMF Only)	Stop code.



Figure 3-3-3 Hardware Gain

Table 3-3-3 Instruction of Hardware gain

Options	Definition
FXS Rx gain	Set the FXS port Rx gain. Range: -35, 0 or 35.
FXS Tx gain	Set the FXS port Tx gain. Range: -35, 0 or 35.

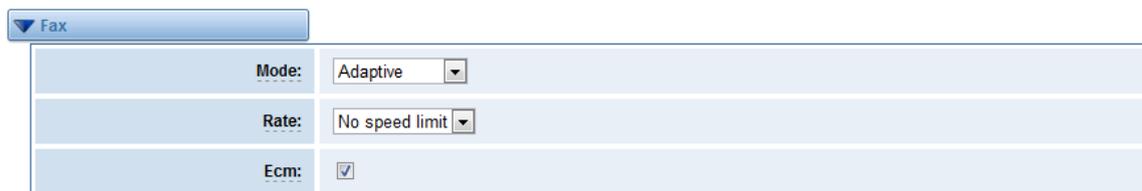


Figure 3-3-4 Fax Configuration

Table 3-3-4 Definition of Fax

Options	Definition
Mode	Set the transmission mode.
Rate	Set the rate of sending and receiving.
Ecm	Enable/disable T.30 ECM (error correction mode) by default.

Country	
Country:	United States / North America
Ring cadence:	2000,4000
Dial tone:	350+440
Ring tone:	440+480/2000,0/4000
Busy tone:	480+620/500,0/500
Call waiting tone:	440/300,0/10000
Congestion tone:	480+620/250,0/250
Dial recall tone:	!350+440/100,!0/100,!350+440/100,!0/100,!350+440/100,!0/100,350+440
Record tone:	1400/500,0/15000
Info tone:	!950/330,!1400/330,!1800/330,0
Stutter tone:	!350+440/100,!0/100,!350+440/100,!0/100,!350+440/100,!0/100,350+440

Figure 3-3-5 Country Configuration

Table 3-3-5 Definition of Country

Options	Definition
Country	Configuration for location specific tone indications.
Ring cadence	List of durations the physical bell rings.
Dial tone	Set of tones to be played when one picks up the hook.
Ring tone	Set of tones to be played when the receiving end is ringing.
Busy tone	Set of tones played when the receiving end is busy.
Call waiting tone	Set of tones played when there is a call waiting in the background.
Congestion tone	Set of tones played when there is some congestion.
Dial recall tone	Many phone systems play a recall dial tone after hook flash.
Record tone	Set of tones played when call recording is in progress.
Info tone	Set of tones played with special information messages (e.g., number is out of service.)
Stutter tone	

## 4. SIP

### SIP Endpoints

This page shows everything about your SIP, you can see status of each SIP.

<input type="checkbox"/>	Endpoint Name	Registration	Credentials	Actions
<input type="checkbox"/>	301	client	301@172.16.8.63	 

**Figure 4-1-1 SIP Status**

You can click  button to add a new SIP endpoint, and if you want to modify existed endpoints, you can click  button.

### Main Endpoint Settings

There are 3 kinds of registration types for choose. You can choose “Anonymous, Endpoint registers with this gateway or This gateway registers with the endpoint”.

You can configure as follows:

If you set up a SIP endpoint by registration “None” to a server, then you can’t register other SIP endpoints to this server. (If you add other SIP endpoints, this will cause Out-band Routes and Trunks confused.)

Main Endpoint Settings	
Name:	301
User Name:	<input type="text"/> <input checked="" type="checkbox"/> Anonymous
Password:	<input type="text"/>
Registration:	None
Hostname or IP Address:	172.16.8.63
Transport:	UDP
NAT Traversal:	Yes
SUBSCRIBE for MWI:	No

Figure 4-1-2 Anonymous Registration

For convenience, we have designed a method that you can register your SIP endpoint to your gateway, thus your gateway just work as a server.

Main Endpoint Settings	
Name:	301
User Name:	301 <input type="checkbox"/> Anonymous
Password:	301
Registration:	Endpoint registers with this gateway
Hostname or IP Address:	dynamic
Transport:	UDP
NAT Traversal:	Yes
SUBSCRIBE for MWI:	No

Figure 4-1-3 Register to Gateway

Also you can choose registration by “This gateway registers with the endpoint”, it’s the same with “None”, except name and password.

▼ Main Endpoint Settings

<b>Name:</b>	<input style="width: 90%;" type="text" value="301"/>
<b>User Name:</b>	<input style="width: 90%;" type="text" value="301"/> <input type="checkbox"/> Anonymous
<b>Password:</b>	<input style="width: 90%;" type="text" value="301"/>
<b>Registration:</b>	<input style="width: 90%;" type="text" value="This gateway registers with the endpoint"/> ▼
<b>Hostname or IP Address:</b>	<input style="width: 90%;" type="text" value="172.16.0.88"/>
<b>Transport:</b>	<input style="width: 90%;" type="text" value="UDP"/> ▼
<b>NAT Traversal:</b>	<input style="width: 90%;" type="text" value="Yes"/> ▼
<b>SUBSCRIBE for MWI:</b>	<input style="width: 90%;" type="text" value="No"/> ▼

Figure 4-1-4 Register to Server

Table 4-1-1 Definition of SIP Options

Options	Definition
Name	A name which is able to read by human. And it's only used for user's reference.
Username	User Name the endpoint will use to authenticate with the gateway.
Password	Password the endpoint will use to authenticate with the gateway. Allowed characters.
Registration	<p><b>None</b>---Not registering;</p> <p><b>Endpoint registers with this gateway</b>---When register as this type, it means the GSM gateway acts as a SIP server, and SIP endpoints register to the gateway;</p> <p><b>This gateway registers with the endpoint</b>---When register as this type, it means the GSM gateway acts as a client, and the endpoint should be register to a SIP server;</p>
Hostname or IP Address	IP address or hostname of the endpoint or 'dynamic' if the endpoint has a dynamic IP address. This will require registration.

Transport	This sets the possible transport types for outgoing. Order of usage, when the respective transport protocols are enabled, is UDP, TCP, TLS. The first enabled transport type is only used for outbound messages until a Registration takes place. During the peer Registration the transport type may change to another supported type if the peer requests so.
NAT Traversal	Addresses NAT-related issues in incoming SIP or media sessions. <b>No</b> ---Use Rport if the remote side says to use it. <b>Force Rport on</b> ---Force Rport to always be on. <b>Yes</b> ---Force Rport to always be on and perform comedia RTP handling. <b>Rport if requested and comedia</b> ---Use Rport if the remote side says to use it and perform comedia RTP handling.

## Advanced: Registration Options

**Table 4-1-2 Definition of Registration Options**

Options	Definition
Authentication User	A username to use only for registration.
Register Extension	When Gateway registers as a SIP user agent to a SIP proxy (provider), calls from this provider connect to this local extension.
From User	A username to identify the gateway to this endpoint.
From Domain	A domain to identify the gateway to this endpoint.
Remote Secret	A password which is only used if the gateway registers to the remote side.
Port	The port number the gateway will connect to at this endpoint.
Quality	Whether or not to check the endpoint's connection status.
Qualify Frequency	How often, in seconds, to check the endpoint's connection status.

## Call Settings

**Table 4-1-3 Definition of Call Options**

Options	Definition
DTMF Mode	Set default DTMF Mode for sending DTMF. Default: rfc2833. Other options: 'info', SIP INFO message (application/dtmf-relay); 'Inband', Inband audio (require 64kbit codec -alaw, ulaw).
Call Limit	Setting a call-limit will cause calls above the limit not to be accepted.
Trust Remote-Party-ID	Whether or not the Remote-Party-ID header should be trusted.
Send Remote-Party-ID	Whether or not to send the Remote-Party-ID header.
Remote Party ID Format	How to set the Remote-Party-ID header: from Remote-Party-ID or from P-Asserted-Identity.
Caller ID Presentation	Whether or not to display Caller ID.

## Advanced: Signaling Settings

**Table 4-1-4 Definition of Signaling Options**

Options	Definition
Progress Inband	Set default DTMF Mode for sending DTMF. Default: rfc2833. Other options: 'info', SIP INFO message (application/dtmf-relay); 'inband', Inband audio (require 64kbit codec -alaw, ulaw).
Allow Overlap Dialing	Allow Overlap Dialing: Whether or not to allow overlap dialing. Disabled by default.
Append user=phone to URI	Whether or not to add '; user=phone' to URIs that contain a valid phone number.
Add Q.850 Reason Headers	Whether or not to add Reason header and to use it if it is available.

Honor SDP Version	By default, the gateway will honor the session version number in SDP packets and will only modify the SDP session if the version number change. Turn this option off to force the gateway to ignore the SDP session version number and treat all SDP data as new data. This is required for devices that send non-standard SDP packets (observed with Microsoft OCS). By default this option is on.
Allow Transfers	Whether or not to globally enable transfers. Choosing 'no' will disable all transfers (unless enabled in peers or users). Default is enabled.
Allow Promiscuous Redirects	Whether or not to allow 302 or REDIR to non-local SIP address. Note that promiscredir when redirects are made to the local system will cause loops since this gateway is incapable of performing a "hairpin" call.
Max Forwards	Setting for the SIP Max-Forwards header (loop prevention).
Send TRYING on REGISTER	Send a 100 Trying when the endpoint registers.
Outbound Proxy	A proxy to which the gateway will send all outbound signaling instead of sending signaling directly to endpoints.

## Advanced: Timer Settings

**Table 4-1-5 Definition of Timer Options**

Options	Definition
Default T1 Timer	This timer is used primarily in INVITE transactions. The default for Timer T1 is 500ms or the measured run-trip time between the gateway and the device if you have qualify=yes for the device.
Call Setup Timer	If a provisional response is not received in this amount of time, the call will auto-congest. Defaults to 64 times the default T1 timer.
Session Timers	Session-Timers feature operates in the following three modes: originate, Request and run session-timers always; accept, run session-timers only when requested by other UA; refuse, do not run session timers in any case.

Minimum Session Refresh Interval	Minimum session refresh interval in seconds. Default is 90secs.
Maximum Session Refresh Interval	Maximum session refresh interval in seconds. Defaults to 1800secs.
Session Refresher	The session refresher, uac or uas. Defaults to uas.

## Media Settings

**Table 4-1-6 Definition of Media Settings**

Options	Definition
Media Settings	Select codec from the drop down list. Codecs should be different for each Codec Priority.

## Batch SIP Endpoint

If you want add batch Sip accounts, you can configure this page. Look out: this is only used when “This gateway registers with the endpoint” work mode.

<input type="checkbox"/>	Port	Port Name	User Name	Password	Hostname or IP Address	Port	VOS Encryption	Codec Priority	Support Codec
<input type="checkbox"/>		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	1	port1	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	2	port2	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	3	port3	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	4	port4	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	5	port5	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	6	port6	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	7	port7	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	8	port8	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾

**Figure 4-2-1 Batch SIP Endpoint**

## Advanced SIP Settings

### Networking

**Table 4-3-1 Definition of Networking Options**

Options	Definition
UDP Bind Port	Choose a port on which to listen for UDP traffic.
Enable TCP	Enable server for incoming TCP connection (default is no).
TCP Bind Port	Choose a port on which to listen for TCP traffic.
TCP Authentication Timeout	The maximum number of seconds a client has to authenticate. If the client does not authenticate before this timeout expires, the client will be disconnected.(default value is: 30 seconds).
TCP Authentication Limit	The maximum number of unauthenticated sessions that will be allowed to connect at any given time(default is:50).
Enable Hostname Lookup	Enable DNS SRV lookups on outbound calls Note: the gateway only uses the first host in SRV records Disabling DNS SRV lookups disables the ability to place SIP calls based on domain names to some other SIP users on the Internet specifying a port in a SIP peer definition or when dialing outbound calls with suppress SRV lookups for that peer or call.
Enable Internal SIP Call	Whether enable the internal SIP calls or not when you select the registration option "Endpoint registers with this gateway".
Internal SIP Call Prefix	Specify a prefix before routing the internal calls.

## NAT Settings

**Table 4-3-2 Definition of NAT Settings**

Options	Definition
Local Network	<p>Format:192.168.0.0/255.255.0.0 or 172.16.0.0./12. A list of IP address or IP ranges which are located inside a NATed network.</p> <p>This gateway will replace the internal IP address in SIP and SDP messages with the external IP address when a NAT exists between the gateway and other endpoints.</p>
Local Network List	Local IP address list that you added.
Subscribe Network Change Event	<p>Through the use of the test_stun_monitor module, the gateway has the ability to detect when the perceived external network address has changed. When the stun_monitor is installed and configured, chan_sip will renew all outbound registrations when the monitor detects any sort of network change has occurred. By default this option is enabled, but only takes effect once res_stun_monitor is configured. If res_stun_monitor is enabled and you wish to not generate all outbound registrations on a network change, use the option below to disable this feature.</p>

## Advanced: NAT Settings

**Table 4-3-3 Definition of NAT Settings Options**

Options	Definition
Start of RTP Port Range	Start of range of port numbers to be used for RTP.
End of RTP port Range	End of range of port numbers to be used for RTP.
RTP Timeout	

## Parsing and Compatibility

**Table 4-3-4 Instruction of Parsing and Compatibility**

<b>Options</b>	<b>Definition</b>
Strict RFC Interpretation	Check header tags, character conversion in URIs, and multiline headers for strict SIP compatibility(default is yes)
Send Compact Headers	Send compact SIP headers
SDP Owner	Allows you to change the username filed in the SDP owner string. This filed MUST NOT contain spaces.
Disallowed SIP Methods	The external hostname (and optional TCP port) of the NAT.
Shrink Caller ID	The shrinkcallerid function removes '(', ' ', ')', non-trailing '!', and '-' not in square brackets. For example, the caller id value 555.5555 becomes 5555555 when this option is enabled. Disabling this option results in no modification of the caller id value, which is necessary when the caller id represents something that must be preserved. By default this option is on.
Maximum Registration Expiry	Maximum allowed time of incoming registrations and subscriptions (seconds).
Minimum Registration Expiry	Minimum length of registrations/subscriptions (default 60).
Default Registration Expiry	Default length of incoming/outgoing registration.
Registration Timeout	How often, in seconds, to retry registration calls. Default 20 seconds.
Number of Registration Attempts Enter '0' for unlimited	Number of registration attempts before we give up. 0 = continue forever, hammering the other server until it accepts the registration. Default is 0 tries, continue forever.

## Security

**Table 4-3-5 Instruction of Security**

<b>Options</b>	<b>Definition</b>
Match Auth Username	If available, match user entry using the 'username' field from the authentication line instead of the 'from' field.
Realm	Realm for digest authentication. Realms MUST be globally unique according to RFC 3261. Set this to your host name or domain name.
Use Domain as Realm	Use the domain from the SIP Domains setting as the realm. In this case, the realm will be based on the request 'to' or 'from' header and should match one of the domain. Otherwise, the configured 'realm' value will be used.
Always Auth Reject	When an incoming INVITE or REGISTER is to be rejected, for any reason, always reject with an identical response equivalent to valid username and invalid password/hash instead of letting the requester know whether there was a matching user or peer for their request. This reduces the ability of an attacker to scan for valid SIP usernames. This option is set to 'yes' by default.
Authenticate Options Requests	Enabling this option will authenticate OPTIONS requests just like INVITE requests are. By default this option is disabled.
Allow Guest Calling	Allow or reject guest calls (default is yes, to allow). If your gateway is connected to the Internet and you allow guest calls, you want to check which services you offer everyone out there, by enabling them in the default context.

---

## Media

**Table 4-3-6 Instruction of Media**

Options	Definition
Premature Media	Some ISDN links send empty media frames before the call is in ringing or progress state. The SIP channel will then send 183 indicating early media which will be empty - thus users get no ring signal. Setting this to "yes" will stop any media before we have call progress (meaning the SIP channel will not send 183 Session Progress for early media). Default is 'yes'. Also make sure that the SIP peer is configured with progressinband=never. In order for 'noanswer' applications to work, you need to run the progress() application in the priority before the app.
TOS for SIP Packets	Sets type of service for SIP packets
TOS for RTP Packets	Sets type of service for RTP packets

## 5. Network, Advanced and Logs

### Network

On “Network” page, there are “Network Settings”, “DDNS Settings”, and “Toolkit”.

#### Network Settings

There are three types of LAN port IP, Factory, Static and DHCP. Factory is the default type, and it is 172.16.99.1. When you Choose LAN IPv4 type is “Factory”, this page is not editable.

A reserved IP address to access in case your gateway IP is not available. Remember to set a similar network segment with the following address of your local PC.

LAN IPv4	
Interface:	eth0
Type:	Static <input type="button" value="v"/>
MAC:	A0:98:05:01:17:39

IPv4 Settings	
Address:	172.16.161.1
Netmask:	255.255.0.0
Default Gateway:	172.16.0.1

DNS Servers	
DNS Server 1:	202.96.134.133
DNS Server 2:	202.96.128.166
DNS Server 3:	8.8.8.8
DNS Server 4:	

Reserved Access IP	
Enable:	<input checked="" type="checkbox"/> ON
Reserved Address:	192.168.99.1
Reserved Netmask:	255.255.255.0

Figure 5-1-1 LAN Settings Interface

Table 5-1-1 Definition of Network Settings

Options	Definition
Interface	The name of network interface.
Type	The method to get IP. Factory: Getting IP address by Slot Number (System → information to check slot number). Static: manually set up your gateway IP. DHCP: automatically get IP from your local LAN.
MAC	Physical address of your network interface.
Address	The IP address of your gateway.
Netmask	The subnet mask of your gateway.
Default Gateway	Default gateway IP address.
Reserved Access IP	A reserved IP address to access in case your gateway IP is not available. Remember to set a similar network segment with the following address of your local PC.
Enable	A switch to enable the reserved IP address or not. ON(enabled), OFF(disabled)
Reserved Address	The reserved IP address for this gateway.
Reserved Netmask	The subnet mask of the reserved IP address.

Basically this info is from your local network service provider, and you can fill in four DNS servers.

DNS Servers

<b>DNS Server 1:</b>	<input style="width: 60%;" type="text" value="221.179.38.7"/>
<b>DNS Server 2:</b>	<input style="width: 60%;" type="text"/>
<b>DNS Server 3:</b>	<input style="width: 60%;" type="text"/>
<b>DNS Server 4:</b>	<input style="width: 60%;" type="text"/>

Figure 5-1-2 DNS Interface

Table 5-1-2 Definition of DNS Settings

Options	Definition
DNS Servers	A list of DNS IP address. Basically this info is from your local network service provider.

## VPN Settings

You can upload the OpenVPN client configuration, if success, you can see a VPN virtual network card on SYSTEM status page. About the configure format you can refer to the Notice and Sample configuration.

VPN Settings

VPNTYPE: OpenVPN ▾

**OpenVPN Settings**

Upload Configuration: 选择文件 未选择任何文件 File Upload

Notice:

1. The format of the upload file should be like this xxxx.tar.gz;

2. The postfix of configuration files should be .conf;

3. The upload file can not include any directory;

4. If still confused please download the sample configuration and refer to it;

Sample Configuration Download Samples

Figure 5-1-3 OpenVPN Interface

VPN Settings

VPNTYPE: PPTP VPN ▾

**PPTP VPN Settings**

<b>Server:</b>	<input style="width: 100%;" type="text" value="0.0.0.0"/>
<b>Account:</b>	<input style="width: 100%;" type="text" value="test"/>
<b>Password:</b>	<input style="width: 100%;" type="password" value="...."/>
<b>Domain:</b>	<input style="width: 100%;" type="text"/>
<b>Use MPPE:</b>	<input type="checkbox"/>

Figure 5-1-4 PPTP VPN Interface

## DDNS Settings

You can enable or disable DDNS (dynamic domain name server).

DDNS Settings	
DDNS:	<input checked="" type="checkbox"/> ON
Type:	inadyn ▼
Username:	admin
Password:	admin
Your domain:	www.internet.site.com

**Figure 5-1-5 DDNS Interface**

**Table 5-1-3 Definition of DDNS Settings**

Options	Definition
DDNS	Enable/Disable DDNS(dynamic domain name server)
Type	Set the type of DDNS server.
Username	Your DDNS account's login name.
Password	Your DDNS account's password.
Your domain	The domain to which your web server will belong.

## Toolkit

It is used to check network connectivity. Support Ping command on web GUI.

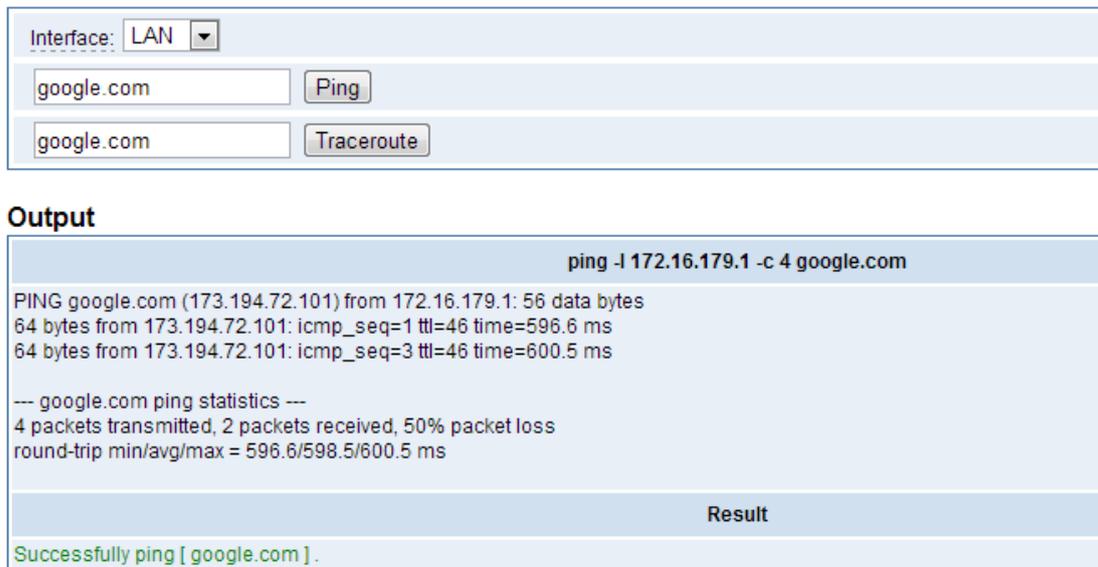


Figure 5-1-6 Network Connectivity Checking

## Advanced

### Asterisk API

When you make “Enable” switch to “on”, this page is available.

General		
Enabled:	<input checked="" type="checkbox"/> ON	
Port:	5038	

Manager		
Manager Name:	admin	
Manager secret:	admin	
Deny:	0.0.0.0/0.0.0.0	
Permit:	172.16.123.123/255.255.0.0&192.168.1.0/2	

Rights		
System:	read: <input checked="" type="checkbox"/>	write: <input checked="" type="checkbox"/>
Call:	read: <input checked="" type="checkbox"/>	write: <input checked="" type="checkbox"/>
Log:	read: <input checked="" type="checkbox"/>	write: <input checked="" type="checkbox"/>
Verbose:	read: <input checked="" type="checkbox"/>	write: <input checked="" type="checkbox"/>

Figure 5-2-1 API Interface

Table 5-2-1 Definition of Asterisk API

Options	Definition
Port	Network port number
Manager Name	Name of the manager without space
Manager secret	Password for the manager. Characters: Allowed characters “-_.<>&0-9a-zA-Z”. Length:4-32 characters.
Deny	If you want to deny many hosts or networks, use char & as separator.   Example: 0.0.0.0/0.0.0.0 or 192.168.1.0/255.255.255.0&10.0.0.0/255.0.0.0
Permit	If you want to permit many hosts or network, use char & as separator.  Example: 0.0.0.0/0.0.0.0 or 192.168.1.0/255.255.255.0&10.0.0.0/255.0.0.0
System	General information about the system and ability to run system management commands,  such as Shutdown, Restart, and Reload.
Call	Information about channels and ability to set information in a running channel.
Log	Logging information. Read-only. (Defined but not yet used.)
Verbose	Verbose information. Read-only. (Defined but not yet used.)
Command	Permission to run CLI commands. Write-only.
Agent	Information about queues and agents and ability to add queue members to a queue.
User	Permission to send and receive UserEvent.
Config	Ability to read and write configuration files.
DTMF	Receive DTMF events. Read-only.
Reporting	Ability to get information about the system.
CDR	Output of cdr, manager, if loaded. Read-only.
Dialplan	Receive NewExten and Varset events. Read-only.
Originate	Permission to originate new calls. Write-only.
All	Select all or deselect all.

Once you set like the above figure, the host 172.16.123.123/255.255.0.0 is allowed to access the gateway API. Please refer to the following figure to access the gateway API by putty. 172.16.123.123 is the gateway’s IP, and 5038 is its API port.

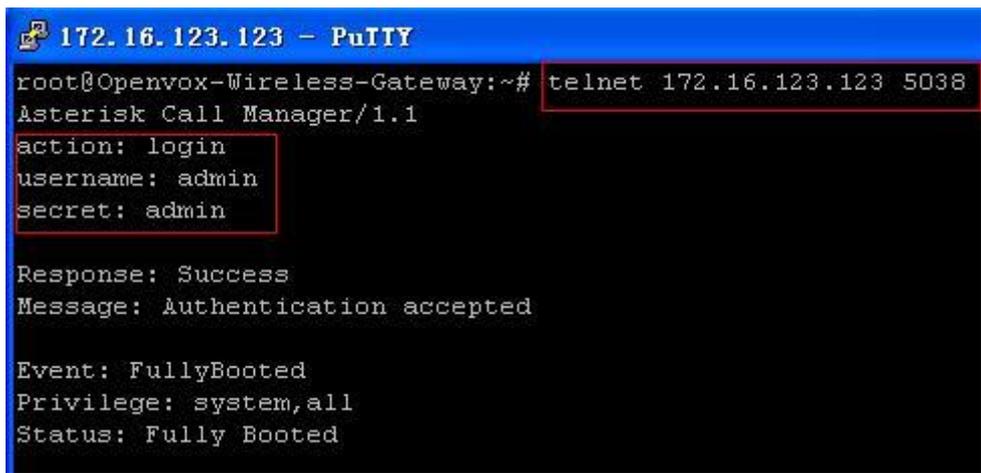


Figure 5-2-2 Putty Access

## Asterisk CLI

In this page, you are allowed to run Asterisk commands.

Asterisk CLI

Command:

Execute

**Output:**

```
! Execute a shell command
agi dump html Dumps a list of AGI commands in HTML format
agi exec Add AGI command to a channel in Async AGI
agi set debug [on|off] Enable/Disable AGI debugging
agi show commands [topic] List AGI commands or specific help
aoc set debug enable cli debugging of AOC messages
cc cancel Kill a CC transaction
cc report status Reports CC stats
cdr show status Display the CDR status
cel show status Display the CEL status
channel request hangup Request a hangup on a given channel
```

Figure 5-2-3 Asterisk Command Interface

Table 5-2-2 Definition of Asterisk API

Options	Definition
Command	Type your Asterisk CLI commands here to check or debug your gateway.

If you type “help” or “?” and execute it, the page will show you the executable commands.

## Asterisk File Editor

On this page, you are allowed to edit and create configuration files. Click the file to edit.

Configuration Files	
File Name	File Size
<a href="#">aaa.conf</a>	11474
<a href="#">agents.conf</a>	2136
<a href="#">alarmreceiver.conf</a>	2227
<a href="#">asterisk.conf</a>	247
<a href="#">cdr.conf</a>	572
<a href="#">cdr_custom.conf</a>	388
<a href="#">cdr_manager.conf</a>	59
<a href="#">chan_extra.conf</a>	283
<a href="#">codecs.conf</a>	1655
<a href="#">dnsmgr.conf</a>	190

/ 5

**Figure 5-2-4 Configuration Files List**

Click “New Configuration File” to create a new configuration file. After editing or creating, please reload Asterisk.

## Logs

On the “Log Settings” page, you should set the related logs on to scan the responding logs page. For example, set “System Logs” on like the following, then you can turn to “System” page for system logs, otherwise, system logs is unavailable. And the same with other log pages.

System Logs	
<b>System Logs:</b>	<input checked="" type="checkbox"/> ON
<b>Auto clean:</b>	<input checked="" type="checkbox"/> ON    maxsize : 1MB <input type="button" value="▼"/>

**Figure 5-3-1 System Logs Control**

System Logs

```
[2013/07/05 18:51:20] Power on
[2013/07/08 11:14:57] Power on
[2013/07/09 13:56:56] System Update
[2013/07/09 13:59:08] Power on
[2013/07/09 14:59:43] System Update
[2013/07/09 15:07:18] System Update
[2013/07/09 15:10:33] System Update
[2013/07/09 15:27:58] System Update
[2013/07/09 15:44:20] System Update
[2013/07/09 15:46:54] System Update
[2013/07/09 15:47:03] Power off
[2013/07/09 15:47:52] Power on
[2013/07/09 15:59:26] Power on
[2013/07/10 18:08:57] Power off
[2013/07/10 18:09:35] Power on
[2013/07/11 14:30:22] System Update
[2013/07/11 14:30:44] Power off
[2013/07/11 14:31:19] Power on
[2013/07/12 17:00:41] Power off
[2013/07/12 17:01:15] Power on
[2013/07/12 17:26:09] System Update
```

Figure 5-3-2 System Logs Output

**Notice:** The same to Asterisk Logs and SIP Logs.

Table 5-3-1 Definition of LOG

Options	Definition
System Logs	Whether enable or disable system log.
Auto clean (System Logs)	switch on : when the size of log file reaches the max size, the system will cut a half of the file. New logs will be retained.  switch off : logs will remain, and the file size will increase gradually. default on, max size=1MB.
Verbose	Asterisk console verbose message switch.
Notice	Asterisk console notice message switch.
Warning	Asterisk console warning message switch.
Debug	Asterisk console debug message switch.
Error	Asterisk console error message switch.

DTMF	Asterisk console DTMF info switch.
Auto clean: (asterisk logs)	switch on : when the size of log file reaches the max size, the system will cut a half of the file. New logs will be retained. switch off : logs will remain, and the file size will increase gradually. default on, max size=100KB.
SIP Logs:	Whether enable or disable SIP log.
Auto clean: (SIP logs)	switch on : when the size of log file reaches the max size, the system will cut a half of the file. New logs will be retained. switch off : logs will remain, and the file size will increase gradually. default on, default size=100KB.

***Thank You for Choosing OpenVox Products!***